

BN Thermic Ltd

34 Stephenson Way
Three Bridges, Crawley
West Sussex
RH10 1TN
England

Tel: +44 (0)1293 547361

Fax: +44 (0)1293 531432

BN*thermic*


SWD Series Finned Tubular Convector Heaters

INSTALLATION AND OPERATING INSTRUCTIONS

PACKAGING - Unpack the heater and ensure all packaging material is removed from the heater and dispose, retain these instructions for future use. The packaging should be disposed according to the current legislation regarding waste disposal.

LOCATION - This heater is intended to be mounted horizontally at low level either high level or low level. When the heater is installed in an area to which personnel have access an SWG protective guard must be used. When energised the stainless steel tube and fins become hot and contact must be avoided. A minimum clearance of 300mm above the heater should be allowed.

The heater must be fixed securely to the wall or floor using the mounting brackets provided.

CONNECTIONS - Remove the four screws which retain the terminal box cover and terminate cable through a suitably approved connector. Prepare the cable and connect the Earth wire coloured Green/Yellow to the appropriate earth screw marked . Connect the live wire coloured Brown to the terminal marked L, connect the Neutral wire coloured Blue to the terminal marked N. Ensure the tightness and integrity of all connections and ensure the cable gland is also securely and correctly tightened, then secure the terminal box cover using the four screws. **THIS HEATER MUST BE EARTHED.**

OPERATION - Energise the heater and if a thermostat is fitted, turn the thermostat knob clockwise to activate the thermostat, the heater will get hot very quickly. As previously advised the heater becomes very hot and direct contact must be avoided with the outer sheath.

Please Note: This heater is not suitable in areas used by young children and the elderly.

This heater is intended for normal space heating applications it is NOT designed for areas containing flammable or explosive gases.

Ensure the heater is installed where it cannot be covered; the minimum 300mm area around the heater must be observed.

THIS HEATER IS NONE USER SERVICEABLE

GENERAL MAINTENANCE ON ELECTRIC HEATERS

Prior to any periodic cleaning or servicing always ENSURE THE SUPPLY TO THE HEATER IS COMPLETELY ISOLATED.

BN Thermic Electric heaters are factory assembled and tested and are non user serviceable. They are intended to operate for many years problem free.

If any doubt consult a qualified electrician or H & V engineer.

WARRANTY - Your BN Thermic heater is guaranteed for a period of one year from the date of purchase. We will repair or replace at our discretion any part found to be defective.

BN Thermic cannot assume any consequential liability. This guarantee in no way prejudices your rights under common law and is offered as an addition to consumer liability rights.